 

 





 











 



 



 

 













 



 



 

 





 



 

 





Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu / Home
 D.Setup/Index	 D.Menu / Top	 Up	 Up
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Play/Hold	 Play / Slow	 Left	 Left
 Pause/Hold	 Pause / Step / Freeze	 Ok	 OK
 Stop/Mix	 Stop / Hold	 Right	 Right
 <</Cancel	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>/Size	 >> / Tune+	 Down	 Down
 I<</Reveal	 I<< / Preset-	 Vol+	 Vol+
 >>I/Subpage	 >>I / Preset+	 Eject/Auto	 Smart / List
 S.Mode	 Sound / Title	 Ch+	 CH+ / Page+
 Subtitle	 Subtitle / EQ	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 Ch-	 CH- / Page-
 Nicam/Audio	 Setup / OPT /	 1	 1
 D.Menu/Text	 Text / Goto	 2	 2
 Input	 AV / Input / RDS	 3	 3



