



| Original | | Recharge | | Original | | Recharge | |
|----------|---------------|----------|-------------------|----------|----------------|----------|----------------------------|
| | Power | | Power | | -/-- | + | Shift + Guide / EPG / -/-- |
| | PC Auto/Eject | | Smart / List | | 0 | | 0 |
| | FAV | | Fav / Marker / PC | | Back | | Back / Return |
| | FAV- | + | Shift + CH- / | | Display | | Display / Media |
| | FAV+ | + | Shift + CH+ / | | Input | | AV / Input / RDS |
| | P.Mode | | Picture / Format | | Aspect | + | Shift + Picture / Format |
| | S.Mode | | Sound / Title | | Up | | Up |
| | Sleep | | Sleep / Timer | | Left | | Left |
| | 1 | | 1 | | OK | | OK |
| | 2 | | 2 | | Right | | Right |
| | 3 | | 3 | | Down | | Down |
| | 4 | | 4 | | Menu | | Menu / Home |
| | 5 | | 5 | | Mute | | Mute / Dimmer |
| | 6 | | 6 | | Exit/DVD Setup | | Exit / Cancel / Clear |
| | 7 | | 7 | | Vol+ | | Vol+ |
| | 8 | | 8 | | Lang/Audio | | Audio / Lang I/II |
| | 9 | | 9 | | CH+ | | CH+ / Page+ |





| Original | Recharge | Original | Recharge |
|---|--|---|---|
|  |  Vol- |  |  Green / APP / Repeat |
|  |  CH- / Page- |  |  Yellow / YouTube / Repeat |
|  |  Text / Goto |  |  Blue / Prime Video / Random |
|  |  Zoom / Size | | |
|  |  TV/Radio / | | |
|  |  Guide / EPG / -/-- | | |
|  |  D.Menu / Top | | |
|  |  Play / Slow | | |
|  |  Pause / Step / Freeze | | |
|  |  << / Tune- | | |
|  |  >> / Tune+ | | |
|  |  Subtitle / EQ | | |
|  |  Shift + Text / | | |
|  |  Stop / Hold | | |
|  |  I<< / Preset- | | |
|  |  >>I / Preset+ | | |
| |  Red / Netflix / Search | | |

