

 





 





















 







Original	Recharge
	
Power	Power
	
Mute	Mute / Dimmer
	
Stop	Stop / Hold
	
I/II	Audio / Lang I/II
	
[*]	Subtitle / EQ
	
16:9	Picture / Format
	
Timer	Sleep / Timer
	
TV	TV/Radio /
	
[]	Setup / OPT /
	
TXT	Text / Goto
	
AV	AV / Input / RDS
	
Menu	Menu / Home
	
Up	Up
	
Index	Info / Angle
	
Left	Left
	
Exit	Exit / Cancel / Clear
	
Down	Down

Original	Recharge
	
Vol+	Vol+
	
Mix	Smart / List
	
CH+	CH+ / Page+
	
Vol-	Vol-
	
<>	Display / Media
	
CH-	CH- / Page-
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
?	Fav / Marker / PC





Original		Recharge		Original		Recharge	
	Red	 	Red / Netflix / Search				
	Green	 	Green / APP / Repeat				
	Yellow	 	Yellow / YouTube / Repeat				
	Blue	 	Blue / Prime Video / Random				
	Vol+	 + 	Shift + Vol+				
	↑ ↓	 + 	Shift + Smart / List				

