


 
 
 
 
 

 

 




 






 

 

 

 

 

 

 

 





 
 


 

 









 

 







Original	Recharge
 Tv Input	 AV / Input / RDS
 One Touch Play	 Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Power	 Power
 DVD/CD	 Red / Netflix / Search
 1	 1
 FM	 Green / APP / Repeat
 2	 2
 USB	 Shift + 8
 3	 3
 Tv/Cable	 Blue / Prime Video / Random
 4	 4
 Audio In	 Guide / EPG / -/--
 5	 5
 Function	 Fav / Marker / PC
 6	 6
 Repeat	 Back / Return

Original	Recharge
 7	 7
 Surround	 Eject / Surround
 8	 8
 EQ	 Shift + Subtitle / EQ
 9	 9
 Audio	 Audio / Lang I/II
 Program	 TV/Radio /
 Subtitle	 Subtitle / EQ
 0	 0
 Angle	 Info / Angle
 Sleep	 Sleep / Timer
 DVD Top Menu	 Shift + Display / Media
 DVD Menu	 D.Menu / Top
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK





	Original	Rechange		Original	Rechange
	Right		Right		
	Vol+		Vol+		
	Setup		Setup / OPT /		
	Down		Down		
	Display		Display / Media		
	Time	 + 	Shift + Sleep / Timer		
	Vol-		Vol-		
	I<</Preset-		I<< / Preset-		
	Pause		Pause / Step / Freeze		
	>>I/Preset+		>>I / Preset+		
	<</Tuning-		<< / Tune-		
	Play		Play / Slow		
	>>/Tuning+		>> / Tune+		
	Stop		Stop / Hold		

