



Original	Rechange
Input	AV / Input / RDS
Wide	Picture / Format
Power	Power
Theater	TV/Radio /
<</<II/<I	<< / Tune-
Play	Play / Slow
I>/II>/>>	>> / Tune+
Sync Menu	Shift + Display / Media
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
i-Manual	Text / Goto
Scene	Shift + Fav / Marker / PC
Top Menu	D.Menu / Top
Menu BD/DVD	Shift + D.Menu / Top Menu
CC/Subtitle	Subtitle / EQ
Internet Widgets	Shift + Smart / List

Original	Rechange
Internet Video	Eject / Surround
Qriocity	Audio / Lang I/II
Favorites	Fav / Marker / PC
Guide	Guide / EPG / -/--
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Red	Red / Netflix / Search
Green	Green / APP / Repeat



 
 

 




Original	Rechange
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
.	LIST SMART Smart / List
0	HDMI - BAT 0
ENT	CLEAR EXIT CANCEL Exit / Cancel / Clear
VOL +	VOL + Vol+
CH +	CH PAGE + CH+ / Page+
Muting	DIMMER MUTE Mute / Dimmer
Vol-	VOL - Vol-
CH-	CH PAGE - CH- / Page-

Original	Rechange
Jump	SIZE ZOOM Zoom / Size





Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 <</< </>>	 << / Tune-
 Play	 Play / Slow
 >/ >/>>	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu BD/DVD	 Picture / Format
 Favorites	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right

Original	Rechange
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home/Menu	 Menu / Home
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9



 



 

 

 

 

 





 

 





 

 



 



 

 

 









 

 
 
 








 

 
 

 


 



 
 







 


 







 











Original		Rechange		Original		Rechange	
	.		Smart / List				
	0		0				
	ENT		Exit / Cancel / Clear				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Muting		Mute / Dimmer				
	Vol-		Vol-				
	CH-		CH- / Page-				





 



 

 

 







 

 

 

 
 
 



 





 

 

 

 

 







 

 



Original	Rechange	Original	Rechange
 Input	 AV / Input / RDS	 5	 5
 Power	 Power	 6	 6
 Menu BD/DVD	 D.Menu / Top	 7	 7
 Favorites	 Fav / Marker / PC	 8	 8
 Guide	 Guide / EPG / -/--	 9	 9
 Up	 Up	 0	 Smart / List
 Display	 Display / Media	 ENT	 0
 Left	 Left	 Exit / Cancel / Clear	 Vol+
 OK	 OK	 Vol+	 CH+ / Page+
 Right	 Right	 CH+	 Back / Return
 Return	 Back / Return	 Muting	 Mute / Dimmer
 Down	 Down	 Vol-	 Vol-
 Home/Menu	 Menu / Home	 CH-	 CH- / Page-
 1	 1	 Jump	 Picture / Format
 2	 2		
 3	 3		
 4	 4		

Original	Rechange	Original	Rechange
 5	 5	 TAPE 5	 5
 6	 6	 TUNER 6	 6
 7	 7	 AUX - HDD 7	 7
 8	 8	 USB 8	 8
 9	 9	 BLUETOOTH 9	 9
 0	 0	 LIST SMART	 0
 ENT	 ENT	 Exit / Cancel / Clear	 0
 Vol+	 Vol+	 Vol+	 Vol+
 CH+	 CH+	 CH+ / Page+	 CH+ / Page+
 RETURN	 RETURN	 Mute / Dimmer	 RETURN
 Vol-	 Vol-	 Vol-	 Vol-
 CH-	 CH-	 CH- / Page-	 CH- / Page-
 MP	 MP	 Picture / Format	 MP





Original	Rechange
 Input	 AV / Input / RDS
 Power	 Power
 <</<I/<II	 << / Tune-
 II>/I/>>>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Menu BD/DVD	 D.Menu / Top
 Up	 Up
 Display	 Display / Media
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Home/Menu	 Menu / Home
 1	 1
 2	 2
 3	 3

Original	Rechange
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Exit / Cancel / Clear
 Vol+	 Vol+
 Muting	 Mute / Dimmer
 Vol-	 Vol-

