






 
























 





 


















Original		Rechange		Original		Rechange	
	CD1		Shift + 1		Cancel		Exit / Cancel / Clear
	CD2		Shift + 2		7		7
	CD3		Shift + 3		8		8
	On/Off		Power		9		9
	Active Bass Ex		Blue / Prime Video / Random		Set		Info / Angle
	Sound		Sound / Title		10		Guide / EPG / -/-
	Sleep		Sleep / Timer		0		0
	Play Mode		OK		+10		Fav / Marker / PC
	Repeat		Green / APP / Repeat		I<<		I<< / Preset-
	FM Mode		TV/Radio /		>>I		>>I / Preset+
	1		1		Stop		Stop / Hold
	2		2		Play/Pause CD		Play / Slow
	3		3		Volume+		Vol+
	Character		Setup / OPT /		Play/Pause MD		Pause / Step / Freeze
	4		4		Fade Muting		Mute / Dimmer
	5		5		Volume-		Vol-
	6		6		MD REC Pause		Rec / Rec Mode



