



Original	Rechange
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
LANG.	AUDIO
0	0
TXT	TEXT
Vol+	+
Mute	MUTE
P+	CH PAGE
Vol-	-

Original	Rechange
	RDS AV INPUT
P-	CH PAGE
Home	HOME MENU
Guide	GUIDE EPG
i	ANGLE INFO
Up	
Left	
OK	OK
Right	
Down	
BACK	RETURN BACK
EXIT	CLEAR EXIT CANCEL
NETFLIX	SHIFT + NETFLIX SEARCH
YouTube	SHIFT + YouTube REPEAT A-B
*1	MEDIA DISPLAY
prime video	SHIFT + Prime Video RANDOM
Red	NETFLIX SEARCH



