





 















 





 

 



 



 

 

 

 

 



 

 

 

 





 

 



















 





















Original		Rechange		Original		Rechange	
	1		1		9		9
	Standby / On		Power		0		0
	Mute		Mute / Dimmer		Display		Display / Media
	Volume+		Vol+		DVD Set Up		Setup / OPT /
	Volume-		Vol-		Top Menu		D.Menu / Top
	Up		Up		Return		Back / Return
	Left		Left		Menu		Menu / Home
	Right		Right		I<<		I<< / Preset-
	Enter		OK		>>I		>>I / Preset+
	Down		Down		Play		Play / Slow
	2		2		<I		<< / Tune-
	3		3		I>		>> / Tune+
	4		4		Stop		Stop / Hold
	5		5		Pause		Pause / Step / Freeze
	6		6		S Title		Subtitle / EQ
	7		7		Audio		Audio / Lang I/II
	8		8		Angle		Info / Angle





Original	Rechange	
On/Off		Power
Audio Off		Mute / Dimmer
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Zoom		Zoom / Size
Progr.		TV/Radio /
Top Menu		D.Menu / Top
C/CH		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right

Original	Rechange	
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Auto/Track		Smart / List
Volume-		Vol-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
Rep/A-B		Yellow / YouTube / Repeat

