



Original	Rechange
Standby/On	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
Dimmer	Shift + Mute / Dimmer
4	4
5	5
6	6
Memory	Rec / Rec Mode
7	7
8	8
9	9
Clear	Exit / Cancel / Clear
0	0
>10	Guide / EPG / -/-
Clock/Timer	Shift + Sleep / Timer

Original	Rechange
Sleep	Sleep / Timer
P.Bass	Setup / OPT /
Bass/Treble	D.Menu / Top
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
<</> Tuning	<</> / Tune-
<</> Tuning	<</> / Preset-
Preset Up	Up
Preset Up	Shift + >>/ Preset+
Preset Up	CH+ / Page+
Tuning >>/>>	>>/ Tune+
Tuning >>/>>	>>/ Preset+
Vol-	Vol-
Vol-	Left
Enter	OK
Vol+	Vol+
Vol+	Right



