












 






 
 


















Original	Rechange
 Power	 Power
 Sleep	 Sleep / Timer
 GE Effect	 Sound / Title
 GE M Call	 Audio / Lang I/II
 << Tape A	 Down
 >> Tape A	 Up
 << Tape B	 Shift + Down
 >> Tape B	 Shift + Up
 < Tape A	 Left
 > Tape A	 Right
 < Tape B	 Shift + Left
 > Tape B	 Shift + Right
 Stop Tape A	 OK
 Rec Tape B	 Rec / Rec Mode
 Pause Tape B	 Shift + Pause / Step /
 Stop Tape B	 Shift + OK
 I << CD	 I << / Preset-

Original	Rechange
 >> CD	 >> / Preset +
 TUNER Band	 6
 Play/Pause CD	 Play / Slow
 Play/Pause CD	 Pause / Step / Freeze
 Stop CD	 Stop / Hold
 Tuner P. Scan	 CH+ / Page+
 Mute	 Mute / Dimmer
 < Phono	 2
 < Phono	 Shift + Play /
 Stop Phono	 Shift + Stop /
 Tuner P. Scan	 CH- / Page-
 Volume	 Vol +
 Video	 4
 AUX	 7
 Volume Control	 Vol -

