




Original	Recharge	Original	Recharge
	Power		Power
	Reset		Exit / Cancel / Clear
	Rec Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	<< Deck		Down
	>> Deck		Up
	Stop Deck		OK
	< Deck		Left
	> Deck		Right
	Side A/B		Back / Return
	Tuner		Shift + 6
	Tuner		Smart / List
	Function		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Preset Down		I<< / Preset-
	Preset Up		>>I / Preset+
	Memo		Rec / Rec Mode
	10		0
	+10		Guide / EPG / -/--
	Tuning Down		<< / Tune-
	Tuning Up		>> / Tune+
	Band		Play / Slow
	Eon		Pause / Step / Freeze
	Vol+		Vol+
	RDS		AV / Input / RDS
	PTY		Stop / Hold



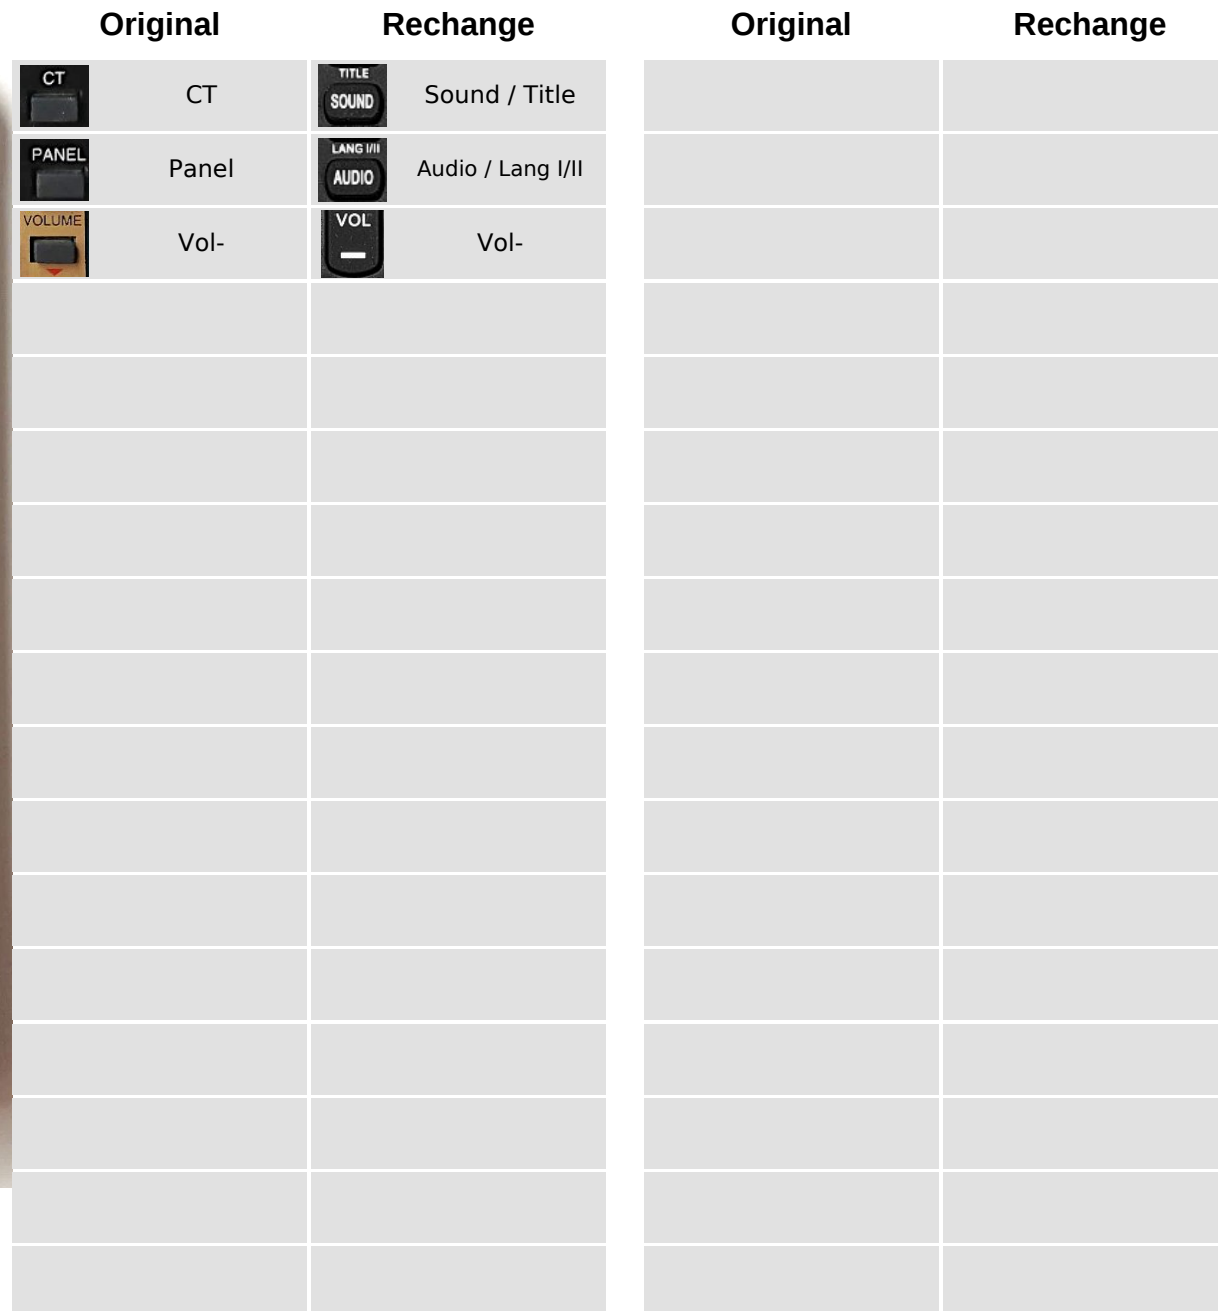



Original	Recharge	Original	Recharge
 Power	 Power	 1 CD	 1
 Sleep	 Sleep / Timer	 2 CD	 2
 Edit	 Setup / OPT /	 3 CD	 3
 Random	 Blue / Prime Video / Random	 4 CD	 4
 Repeat	 Green / APP / Repeat	 5 CD	 5
 I<< CD	 I<< / Preset-	 6 CD	 6
 >>I CD	 >>I / Preset+	 7 CD	 7
 Time Side A/B	 Display / Media	 8 CD	 8
 << CD	 << / Tune-	 9 CD	 9
 >> CD	 >> / Tune+	 10 CD	 0
 Stop CD	 Stop / Hold	 +10 CD	 Guide / EPG / -/-
 Play CD	 Play / Slow	 Vol+	 Vol+
 Program	 TV/Radio /	 Vol-	 Vol-
 Cancel	 Exit / Cancel / Clear		
 Direct	 Smart / List		
 Tuner	 Shift + 6		
 Function	 Menu / Home		

