 











 















 



 



 










 



 



 
















Original		Rechange		Original		Rechange	
	Power		Power		V-		Vol-
	1		1		Source		AV / Input / RDS
	2		2		P-		CH- / Page-
	3		3		[G]		Guide / EPG / -/-
	4		4		*		D.Menu / Top
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Down		Down
	Text		Text / Goto		Back		Back / Return
	0		0		Exit		Exit / Cancel / Clear
	i		Info / Angle		Netflix		Shift + Red / Netflix /
	Menu		Menu / Home		YouTube		Shift + Yellow / YouTube /
	V+		Vol+		prime video		Shift + Blue / Prime
	Mute		Mute / Dimmer		Disney+		Setup / OPT /
	P+		CH+ / Page+		Tik Tok		Picture / Format



