

| Original    | Recharge                                                                                             | Original   | Recharge                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------|
| On/Off      |  Power              | OK Enter   |  OK                    |
| Mute        |  Mute / Dimmer      | Menu Right |  Right                 |
| Txt Stop    |  Stop / Hold        | Menu Off   |  Exit / Cancel / Clear |
| Menu audio  |  Audio / Lang I/II  | Menu Down  |  Down                  |
| Subt.List   |  Subtitle / EQ      | Back       |  Back / Return         |
| Reveal      |  Picture / Format   | Volume+    |  Vol+                  |
| Txt Expand  |  Zoom / Size        | Chan.Up    |  CH+ / Page+           |
| Sleep Timer |  Sleep / Timer      | Volume-    |  Vol-                  |
| Return TV   |  TV/Radio /         | Display    |  Display / Media       |
| Menu video  |  D.Menu / Top       | Chan.Down  |  CH- / Page-           |
| Update      |  Setup / OPT /     | 1          |  1                    |
| Text        |  Text / Goto      | 2          |  2                   |
| TV/AV       |  AV / Input / RDS | 3          |  3                   |
| Menu        |  Menu / Home      | 4          |  4                   |
| Menu Up     |  Up               | 5          |  5                   |
| Info        |  Info / Angle     | 6          |  6                   |
| Menu Left   |  Left             | 7          |  7                   |



Power: **POWER**

Dimmer: **DIMMER MUTE**

Shift: **SHIFT**

TV: **TV** (SLOW, STEP-FREEZE, HOLD, REC MODE)

DVD: **DVD** (TUNE-, TUNE+, PRESET-, PRESET+)

SAT: **SAT** (TITLE, LANG/VI, EQ, SURROUND)

AUX: **AUX** (SOUND, AUDIO, SUBTITLE, PROGRAM)

Format: **FORMAT** (SIZE, TIMER, TV/RADIO)

Picture: **PICTURE** (ZOOM, SLEEP, D.MENU, SETUP, TEXT, AV INPUT)

Top Menu: **TOP MENU** (OPT-TOOLS, GOTO, RDS)

Home: **HOME** (MENU, INFO)

Angle: **ANGLE** (INFO)

Menu: **MENU**

Info: **INFO**

Clear: **CLEAR**

Exit: **EXIT**

Cancel: **CANCEL**

List: **LIST**

Smart: **SMART**

Media: **MEDIA**

Display: **DISPLAY**

Return: **RETURN**

Back: **BACK**

Vol: **VOL**

Ch Page: **CH PAGE**

TV: **TV**

DVD: **DVD**

CD-STB: **CD-STB**

1: **1**

2: **2**

3: **3**

4: **4**

5: **5**

6: **6**

Video: **VIDEO**

Tape: **TAPE**

Tuner: **TUNER**

Aux-HDD: **AUX-HDD**

USB: **USB**

Bluetooth: **BLUETOOTH**

7: **7**

8: **8**

9: **9**

F---: **F---**

HDMI-SAT: **HDMI-SAT**

PC: **PC**

Guide: **GUIDE EPG**

0: **0**

Fav: **FAV MARKER**

Netflix: **NETFLIX**

App: **APP**

YouTube: **YouTube**

Prime Video: **Prime Video**

Search: **SEARCH**

Repeat: **REPEAT**

Repeat A-B: **REPEAT A-B**

Random: **RANDOM**

Mandis shop

www.mandis.tv