

 
 


Original	Recharge
 Open / Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Goto	 Text / Goto
 0	 0
 Clear	 Exit / Cancel / Clear
 Home Menu	 Menu / Home
 Menu	 D.Menu / Top
 Bonus View	 Display / Media

Original	Recharge
 Pop / Top	 Smart / List
 Rev	 << / Tune-
 Play	 Play / Slow
 Fwd	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Strep	 Shift + Pause / Step /
 Slow	 Shift + Play /
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down





Original	Recharge
 Netflix	 Shift + Red / Netflix / Search
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 Random	 Shift + Blue / Prime
 Angle	 Shift + Info / Angle
 PIC	 Picture / Format
 Resolution	 Zoom / Size
 Sub	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 2nd Sub	 Shift + Subtitle / EQ
 2nd Audio	 Shift + Audio / Lang I/II
 A-B	 Shift + Yellow / YouTube / Repeat
 Repeat	 Shift + Green / APP / Repeat

Original	Recharge

