

Original	Recharge	Original	Recharge
On/Off	 Power	Progr/C/CH	 TV/Radio /
Audio Out	 Mute / Dimmer	Sp/Lp/Speed	 D.Menu / Top
Play	 Play / Slow	Erase	 Setup / OPT /
Pause	 Pause / Step / Freeze	Video/Go-To	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info/Intro	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Otr/A.Otr	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Exit	 Exit / Cancel / Clear
T.Set/Clock	 Subtitle / EQ	Menu Down	 Down
Eject/Reverse	 Eject / Surround	Counter Reset	 Back / Return
PAL/Secam	 Picture / Format	Set+	 Vol+
Case Tape	 Zoom / Size	Show View	 Smart / List
Timer/Record	 Sleep / Timer	Chan+	 CH+ / Page+



Original	Recharge	
Set-		Vol-
Display		Display / Media
Chan-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--		Guide / EPG / -/--
0		0
VCR/TV		Fav / Marker / PC
Skip/Search		Red / Netflix / Search
Repeat		Green / APP / Repeat

Original	Recharge	
Rec/Mode		Blue / Prime Video / Random
On/Off	 + 	Shift + Power
Rec. On/Off	 + 	Shift + Rec / Rec Mode
Next Sv+V	 + 	Shift + >>I / Preset+
Mon/TV	 + 	Shift + TV/Radio / Program
Slow/Dpss+	 + 	Shift + Up
Frame Down	 + 	Shift + Left
Slow/Dpss-	 + 	Shift + Down
Slow Down	 + 	Shift + CH- /
Once	 + 	Shift + 1
Daily	 + 	Shift + 2
Weekly	 + 	Shift + 3
Mark Add/Del	 + 	Shift + Fav / Marker / PC

