



Original	Recharge	Original	Recharge
 POWER	 Power	 3	 3
 TV/RADIO	 TV/Radio /	 4	 4
 I<<	 I<< / Preset-	 5	 5
 >>I	 >>I / Preset+	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 ENREG.	 Rec / Rec Mode	 9	 9
 STOP	 Stop / Hold	 FAV	 Fav / Marker / PC
 PLAY/PAUSE	 Play / Slow	 0	 0
 PLAY/PAUSE	 Pause / Step / Freeze	 RECALL	 Back / Return
 LISTE PVR	 Smart / List	 VOL +	 Vol+
 FORMAT	 Picture / Format	 CH +	 CH+ / Page+
 RES.	 AV / Input / RDS	 VOL -	 Vol-
 TTX	 Text / Goto	 MUTE	 Mute / Dimmer
 S-TITRES	 Subtitle / EQ	 CH -	 CH- / Page-
 1	 1	 RED	 Red / Netflix / Search
 2	 2	 GREEN	 Green / APP / Repeat





Original	Recharge
 YELLOW	 Yellow / YouTube / Repeat
 BLUE / TIMER	 Blue / Prime Video / Random
 INFO	 Info / Angle
 AUDIO	 Audio / Lang I/II
 GUIDE	 Guide / EPG / -/--
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 DOWN	 Down
 MENU	 Menu / Home
 QUITTER	 Exit / Cancel / Clear

Original	Recharge

