

 








 
 

 



 



 
 


 
 
















 

 

 
 



 

 


 
 
 
 
 
 



 













 



 
 
 
 


Original	Recharge	Original	Recharge
 Power	 Power	 Text	 Text
 TV System	 Menu	 Timeshift	 Format
 Display	 Info	 Rec	 Rec
 Audio	 Dual	 Sel Favor / Vol +	 Vol +
 Subtitle	 Subt	 Load Favor / Vol -	 Vol -
 Recall	 Pre Ch	 Source	 AV
 A-B	 Shift + Text	 Edit	 3D
 1	 1	 EPG	 Guide
 2	 2	 TV / MHR	 Shift + TV/R
 3	 3	 DTV	 TV/R
 4	 4	 Up / CH +	 Up
 5	 5	 Up / CH +	 Ch +
 6	 6	 Down / CH -	 Down
 7	 7	 Down / CH -	 Ch -
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 Right	 Right





Original	Recharge
 Back	 Back
 Home	 Smart
 Goto	 List
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Skip ←	 Shift + Left
 Skip →	 Shift + Right
 Red / <<<	 Red
 Red / <<<	 <<<
 Green / >>>	 Green
 Green / >>>	 >>>
 Yellow / I<<<	 Yellow
 Yellow / I<<<	 I<<<
 Blue / >>>I	 Blue
 Blue / >>>I	 >>>I
 Mute	 Mute

Original	Recharge
 Timer Rec	 Shift + AV
 Zoom	 Eject
 HDD	 Media
 USB	 Shift + Media
 LAN	 Options

