


 


 









 

 

 

 





 


















 


 





















Original	Rechange	Original	Rechange
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	<		<< / Preset-
	Pause		Pause / Step / Freeze
	>		>> / Preset+
	Info		Info / Angle
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Titles		Subtitle / EQ
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Left		Left
	Up		Up
	Right		Right
	P +		CH+ / Page+
	OK		OK
	P -		CH- / Page-
	Down		Down
	P < P		Smart / List
	Back		Back / Return
	Guide		Guide / EPG / -/--
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Original	Recharge
TV 8	8
WXYZ 9	9
0	0
PVR	MEDIA DISPLAY Display / Media
Page Up	SHIFT + CH PAGE CH+ /
Page Down	SHIFT + CH PAGE CH- /

Original	Recharge

