
















































 


 






 











Original		Rechange		Original		Rechange	
	Power		Power		EPG		Guide / EPG / -/--
	Mute		Mute / Dimmer		Up		Up
	TV/RAD		TV/Radio /		Menu		Menu / Home
	www		Sleep / Timer		Left		Left
	PIP		Zoom / Size		OK		OK
	Grid		D.Menu / Top		right		Right
	Swap		Back / Return		Exit		Exit / Cancel / Clear
	Sub ch		Setup / OPT /		Down		Down
	P/Pg+		CH+ / Page+		Red		Red / Netflix / Search
	RCL		Display / Media		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	P/Pg-		CH- / Page-		Blue		Blue / Prime Video / Random
	i		Info / Angle		1		1
	Vol-		Vol-		2		2
	FAV		Fav / Marker / PC		3		3
	Check		Smart / List		4		4
	Message		Eject / Surround		5		5





Original		Recharge		Original		Recharge	
	6		6		TXT		Text / Goto
	7		7		Audio		Audio / Lang I/II
	8		8				
	9		9				
	Music		Sound / Title				
	0		0				
	Photo		Picture / Format				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Recall		AV / Input / RDS				
	>		>> / Preset+				
	Stop/→		Stop / Hold				
	Pause		Pause / Step / Freeze				
	[]]]]		Shift + Zoom /				
	[...]		Subtitle / EQ				

