







 
















 









 
 
 














Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Eject/Tv Audio	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 +  Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Vol-	 Vol-
 Pic	 Picture / Format
 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Aspect	 +  Shift + Picture / Format
 DVD Setup	 Setup / OPT /
 Back/Tv/Radio	 +  Shift + Back / Return
 Text	 Text / Goto





Original		Rechange	
	EPG		Guide / EPG / -/--
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	FAV		Fav / Marker / PC
	Info		Info / Angle
	Red/DVD/USB		Red / Netflix / Search
	Green/Title		Green / APP / Repeat
	Yellow/PBC		Yellow / YouTube / Repeat
	Blue/Angle		Blue / Prime Video / Random
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Return		Back / Return
	Display		Display / Media
	DVD Audio		Audio / Lang I/II

Original		Rechange	
	Subtitle		Subtitle / EQ
	Reveal		Shift + Exit / Cancel / Clear
	Hold		Shift + Stop /
	List		Smart / List
	Index		TV/Radio /
	Subpage		Shift + Smart / List
	Size		Zoom / Size
	Mix		Shift + Display / Media
	Freeze		Shift + Pause / Step /

