

 
 


 

 

 

 
 
 


 
 




 


 

 

 
 
 

 
 






 
 


 
 
 

 
 
 
 
 
 
 
 

 
 
 
 
 
 
 

 




Original		Recharge		Original		Recharge	
	Power		Power		6		6
	Tv/TXT		Text		7		7
	Input		AV		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down		Back		Back
	Right		Right		FAV		Shift + Pre Ch
	Left		Left		Menu		Menu
	Vol+		Vol +		Exit		Exit
	Vol-		Vol -		Nicam/A2		Shift + Guide
	CH+		Ch +		Display		Shift + Info
	CH-		Ch -		Mute		Mute
	1		1		Picture		Format
	2		2		Sound		Dual
	3		3		Sleep		Sleep
	4		4		Subtitle		Subt
	5		5		EPG		Guide





Original		Rechange		Original		Rechange	
	CH/List		Pre Ch				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue/Screen		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Record		Rec				
	>>/Size		>>				
	<</Hold		<<				
	Cancel		Shift + Back				
	Reveal/Rep		Eject				
	I<</Subpage		D. Menu				
	>>I/Index		Info				
	List		List				

