

 
 
 


 

 
 

 







 

 


 
 

 




 

 

 
 









	Original	Rechange		Original	Rechange
	Power		Power		Exit
	TV/AV		AV		Vol +
	TV/TXT		Text		Vol -
	Cancel		Media		Channel List
	Reveal		D. Menu		Mute
	DTV		Smart		EPG
	Hold		Options		Info
	Size		Format		Up
	Subpage		Shift + Subt		Down
	Index		Shift + Info		Right
	Red		Red		Left
	Green		Green		Ok
	Yellow		Yellow		1
	Blue		Blue		2
	CH+		Ch +		3
	CH-		Ch -		4
	Menu		Menu		5





Original	Rechange
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Rechange
