






































 
















 









 








 
















Original		Rechange		Original		Rechange	
	Aper / Chiuso		Eject / Surround		8		8
	Video / Y		AV / Input / RDS		9		9
	Power		Power		Prog		TV/Radio /
	OSD		Display / Media		Intro		Smart / List
	PBC		D.Menu / Top		0		0
	Titolo		Sound / Title		10+		Guide / EPG / -/-
	Menu		Menu / Home		Pausa		Pause / Step / Freeze
	Ricerca		Red / Netflix / Search		Info / Play		Play / Slow
	1		1		Info / Play		Info / Angle
	2		2		Up		Up
	3		3		Left		Left
	Repeticione		Green / APP / Repeat		Setup		Setup / OPT /
	4		4		Right		Right
	5		5		Ritorno		Back / Return
	6		6		Down		Down
	A-B RPT		Yellow / YouTube / Repeat		Stop		Stop / Hold
	7		7		< Ralent		CH- / Page-





	Original	Recharge		Original	Recharge
	Ralent I>	 CH+ / Page+			
	<< F.REV	 << / Tune-			
	>> F.FWD	 >> / Tune+			
	Step	 +  Shift + Pause / Step /			
	Zoom	 Zoom / Size			
	I<< Prec	 I<< / Preset-			
	>>I Succ	 >>I / Preset+			
	Sottotitoli	 Subtitle / EQ			
	NTSC/PAL	 Picture / Format			
	Volume-	 Vol-			
	Volume+	 Vol+			
	Sleep / Timer	 Sleep / Timer			
	Track	 Text / Goto			
	Audio	 Audio / Lang I/II			
	Muto	 Mute / Dimmer			

	Original	Recharge		Original	Recharge

