



Original	Rechange
 Standby / On	 Power
 Open / Close	 Eject
 PS/IS	 Red
 Scan	 Green
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Goto	 Guide

Original	Rechange
 Zoom	 Shift + Eject
 Add / Clear	 Exit
 Navigation	 List
 Menu	 Menu
 Finalize	 Yellow
 Timer	 Shift + AV
 Up	 Up
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Edit	 Blue
 Quality	 3D
 Audio	 Dual
 Disc Oper	 Smart
 Erase	 Shift + Back
 Angle	 Format





Original	Recharge	Original	Recharge
Title	D. Menu	Fwd >>	>>
Setup	Options	Channel+	Ch +
Subtitle	Subt	Channel-	Ch -
Slow	Shift + Play	Rec / Otr	Rec
Vol+	Vol +	Stop	Stop
Vol-	Vol -	Pause / Step	Pause
Repeat	Text		
Prog	Sleep		
Random	Shift + TV/R		
Return P<->P	Back		
DV/USB	Media		
I<< Prev	I<<		
Next >>I	>>I		
TV	TV/R		
Source	AV		
<< Rev	<<		
Play	Play		

Original	Recharge
Fwd >>	>>
Channel+	Ch +
Channel-	Ch -
Rec / Otr	Rec
Stop	Stop
Pause / Step	Pause

