




 


 
 
 








 











 






Original	Rechange
 Power	 Power
 Mute	 Mute
 Display	 Info
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 Subpage	 Media
 Pre-CH	 Pre Ch
 PC	 Smart
 Tv/Video	 TV/R
 Sleep	 Sleep
 Sound	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Mix	 AV
 Teletext	 Text
 Text Size	 Format
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original		Rechange		Original		Rechange	
	Blue		Blue				
	Index		List				
	Subtitle		Subt				
	Hold		D. Menu				
	Reveal		Options				
	PIP/POP		3D				
	PIP Swap		Back				
	PIP Size		Eject				

