

 
 


 
 

 



 
 
 


 
 
 
 


 



 



 
 
 



 

 

 







 
 
 


 
 


 

 
 
 


 

 

 




 

 

 







Original	Rechange	Original	Rechange
 Power	 Power	 Info	 Info
 VCR	 Smart	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Subtitle	 Subt	 Yellow	 Yellow
 Auto	 Media	 Blue	 Blue





Original		Rechange		Original		Rechange	
	Zoom		Eject				
	Lang/Audio		Dual				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Text		Text				
	Tv/Radio		TV/R				

