 








| Original | Rechange |
|--|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  DVD/TV |  Shift + 2 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  [<>]/Zoom |  Zoom / Size |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/--/Program |  TV/Radio / |
|  0 |  0 |
|  Mute |  Mute / Dimmer |
|  i/Goto |  Info / Angle |
|  Z/DVD Menu |  Menu / Home |

| Original | Rechange |
|---|---|
|  P+ |  Shift + CH+ / |
|  P+ |  CH+ / Page+ |
|  - |  Left |
|  OK |  OK |
|  + |  Right |
|  TXT/DVD Setup |  Text / Goto |
|  P- |  CH- / Page- |
|  P- |  Shift + CH- / |
|  AV/Title |  AV / Input / RDS |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
|  SUB/ << |  << / Tune- |
|  Update/ >> |  >> / Tune+ |
|  Red/Stop |  Red / Netflix / Search |
|  Green/ << |  Green / APP / Repeat |
|  Yellow/Play/Pause |  Yellow / YouTube / Repeat |
|  Blue/ >> |  Blue / Prime Video / Random |

