 



 















































 


 






 
 




 


 




 



 
 
 

 

 

 

 







Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		Menu/Exit		Menu / Home
	Mute		Mute / Dimmer		Vol+		Vol+
	Power		Power		Up		Up
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		CH-		CH- / Page-
	7		7		Down		Down
	8		8		FAV		Fav / Marker / PC
	9		9		CH List		Smart / List
	EPG		Guide / EPG / -/--		I/II		Shift + Audio / Lang I/II
	0		0		Sleep		Sleep / Timer
	Recall		Back / Return		USB		Shift + 8
	[+]		Display / Media		Audio		Audio / Lang I/II
	Menu/Exit		Exit / Cancel / Clear		Video		Shift + 4





	Original	Recharge	Original	Recharge
	Info	 Info / Angle		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Teletext	 Text / Goto		
	Mix	 Shift + Text /		
	Size	 Zoom / Size		
	Subpage	 Rec / Rec Mode		
	Index	 Pause / Step / Freeze		
	Subtitel	 Subtitle / EQ		
	Hold	 Stop / Hold		
	Reveal	 Play / Slow		

