



 


 
 








 

 


 











Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Recharge
 Guide	 Guide
 Exit	 Exit
 Menu	 Menu
 Back	 Back
 ?	 Dual
 Tools	 Options
 Source	 AV
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -



