


 
 



 

 

 




 

















Original		Rechange		Original		Rechange	
	Power		Power		Recall		Back / Return
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P.Mode		Picture / Format		Green		Green / APP / Repeat
	S.Mode		Sound / Title		Yellow		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer		Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK / Enter		OK
	5		5		Right		Right
	6		6		Exit		Exit / Cancel / Clear
	7		7		Down		Down
	8		8		Info		Info / Angle
	9		9		CH+		CH+ / Page+
	Freeze		Pause / Step / Freeze		Home		Shift + Menu /
	0		0		Vol+		Vol+





Original		Recharge		Original		Recharge	
	CH-		CH- / Page-		Zoom-		Shift + Down
	Mouse		Smart / List		Zoom+		Shift + Up
	Vol-		Vol-		EPG		Guide / EPG / -/--
	<< / Text		<< / Tune-		DTV / Radio		TV/Radio /
	<< / Text		Text / Goto		Rec		Rec / Rec Mode
	>> / Hold		Shift + Stop /		Subtitle		Subtitle / EQ
	>> / Hold		>> / Tune+				
	I<< / Mix		I<< / Preset-				
	I<< / Mix		Shift + Text /				
	>>I / Reveal		>>I / Preset+				
	Play/Pause / Index		Play / Slow				
	Stop / Size		Stop / Hold				
	Stop / Size		Zoom / Size				
	FAV		Fav / Marker / PC				
	Aspect		Shift + Picture / Format				
	File		Display / Media				
	Delete		Eject / Surround				

