



 

 
 


 


 
 


Original	Rechange
Standby	Power
Eject	Eject / Surround
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Mute	Mute / Dimmer
7	7
8	8
9	9
Goto	Text / Goto
+10	Guide / EPG / -/-
0	0
Clear	Exit / Cancel / Clear

Original	Rechange
Audio	Audio / Lang I/II
OSD	Display / Media
Angle	Shift + Info / Angle
Zoom	Zoom / Size
Return	Back / Return
Title	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
Select	OK
Right	Right
Setup	Setup / OPT /
Down	Down
PSM	TV/Radio /
Play	Play / Slow
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze





	Original	Rechange	Original	Rechange
REV		 << / Tune-		
FWD		 >> / Tune+		
		 I<< / Preset-		
		 >>I / Preset+		
SLOW		 Shift + Play /		
REPEAT		 Green / APP / Repeat		
A-B		 Yellow / YouTube / Repeat		
P/N		 D.Menu / Top		
Key L		 CH+ / Page+		
Key #		 CH- / Page-		
Vol-		 Vol-		
Vol+		 Vol+		
Info		 Info / Angle		
Keyboard		 Smart / List		
IS		 Fav / Marker / PC		
PS		 Picture / Format		

