



Original	Rechange
Source	AV / Input / RDS
Sleep	Sleep / Timer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Options	Setup / OPT /
0	0
Screens	Display / Media
Vol +	Vol+
Favourites	Fav / Marker / PC

Original	Rechange
P +	CH+ / Page+
Vol -	Vol-
Mute	Mute / Dimmer
P -	CH- / Page-
Up	Up
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TTX	Text / Goto
Pause	Pause / Step / Freeze





Original	Recharge	Original	Recharge
V-Format	FORMAT PICTURE Picture / Format		
EPG	GUIDE EPG Guide / EPG / -/--		
i	ANGLE INFO Info / Angle		
Timer	SHIFT + TIMER SLEEP Shift + Sleep / Timer		
I / II	LANG I/II AUDIO Audio / Lang I/II		
SUB-T	EQ SUBTITLE Subtitle / EQ		

