



 


 














 


 










 













	Original	Rechange		Original	Rechange
	1		1		>>
	2		2		PLAY/PAUSE
	3		3		I<<
	4		4		>>I
	5		5		EJECT
	6		6		MUTE
	7		7		VOLUME+
	8		8		VOLUME-
	9		9		INPUT CD
	0		0		INPUT TUNER
	TIME		AV		INPUT AUX
	REPEAT		Text		INPUT VIDEO
	REPEAL A-B		TV/R		INPUT TAPE 1
	DISPLAY		Info		INPUT TAPE 2
	STOP		Stop		
	PAUSE		Pause		
	<<		<<		

