






















 

 



 
 







 



 






Original		Rechange		Original		Rechange	
	Power		Power		Vol -		Vol -
	Mute		Mute		Aide		Smart
	1		1		CH -		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Retour		Back
	7		7		Down		Down
	8		8		Menu		Menu
	9		9		<<		<<
	<->		Exit		Play / Pause		Play
	0		0		Play / Pause		Pause
	Recall		Pre Ch		Stop		Stop
	Vol +		Vol +		>>		>>
	Info		Info		Red		Red
	CH +		Ch +		Green		Green





Original		Recharge		Original		Recharge	
	Yellow		Yellow				
	Blue		Blue				

