







 













 

 



 

















 




 
 

 
 














 




















 
 







Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		Guide		Guide / EPG / -/--
	5		5		i		Info / Angle
	6		6		Vol +		Vol+
	7		7		Back		Back / Return
	8		8		CH +		CH+ / Page+
	9		9		Vol -		Vol-
	0		0		Filelist		Smart / List
	Media		Display / Media		CH -		CH- / Page-
	Portal		Shift + Menu /		Red		Red / Netflix / Search
	Help		Shift + Info / Angle		Green		Green / APP / Repeat
	Menu		Menu / Home		Yellow		Yellow / YouTube / Repeat
	Up		Up		Blue		Blue / Prime Video / Random





Original	Rechange	Original	Rechange
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 >>	 >>  / Preset+		
 TV / Radio	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Subt	 Subtitle / EQ		
 TTX	 Text / Goto		
 Timer	 Shift + Sleep / Timer		
 Sleep	 Sleep / Timer		

