
 

 



 





 

 

 

 

 


 
 

 

 

 









Original	Recharge
 Power	 Power
 www	 Display / Media
 e-mail	 Smart / List
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+
 Home	 Shift + Menu /
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Info	 Info / Angle
 Ch-	 CH- / Page-
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >>  / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow

Original	Recharge
 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Up	 Up
 Check	 Fav / Marker / PC
 Left	 Left
 Ok	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Tv/Radio	 TV/Radio /
 Search	 Shift + Red / Netflix /
 Resolution	 Subtitle / EQ
 Red/Sub-t	 Red / Netflix / Search
 Green/Text	 Green / APP / Repeat
 Text	 Text / Goto





Original		Recharge		Original	Recharge
	Yellow/Lang	 REPEAT A-B	Yellow / YouTube / Repeat		
	Blue/I-Key	 RANDOM	Blue / Prime Video / Random		
	Usb	 + 	Shift + 8		
	Uhf	 AUDIO	Audio / Lang I/II		
	Aux	 + 	Shift + 7		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Back/Del		Back / Return		
	0		0		
	Caps/Num		D.Menu / Top		



Menu