



| Original | | Recharge | | Original | | Recharge | |
|---|--------------|---|----------------|---|--------------|---|------------------------|
|  | Power |  | Power |  | Page Up |  | Shift + Vol + / Page + |
|  | Freeze |  | Freeze / Timer |  | Page Down |  | Shift + Vol - / Page - |
|  | Hide |  | Shift + Source |  | 1/Left |  | Shift + Left |
|  | Aspect/Ratio |  | Eco / Aspect |  | 2/Play/Pause |  | Shift + Play |
|  | Resync |  | Shift + Power |  | 3/Stop |  | - / Stop |
|  | Source |  | Source |  | 4/VGA |  | Help / Info |
|  | Zoom |  | + / Play |  | 5/Component |  | 3D / Invert |
|  | Back |  | Shift + Menu |  | 6/Video |  | Comp / Video |
|  | Enter |  | Enter |  | 7/SD/USB A |  | Shift + Comp / Video |
|  | Up |  | Up |  | 8/HDMI/DVI |  | Shift + Eco / Aspect |
|  | Down |  | Down |  | 9/LAN/WIFI |  | Volt / Focus |
|  | Left |  | Left |  | 0/USB B |  | Shift + 3D / |
|  | Right |  | Right |  | >>I |  | Shift + Up |
|  | Menu |  | Menu |  | S-Video |  | Mode |
|  | Vol+ |  | Vol + / Page + | | | | |
|  | Vol- |  | Vol - / Page - | | | | |
|  | e |  | Auto | | | | |

