 





 
 
 




 

 


 




 
 


 






 
 


 


 



 
 







 

 


 












Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Vol+		Vol +		8		8
	Vol-		Vol -		9		9
	Play/Preset <>		Play		0		0
	Stop/Clear		Stop		+10		Guide
	Pause/Set		Pause		CD Edit/Check		Back
	>>/>> /Up		>>		PRGM		Options
	Down/ <</<<		<<		Random/Repeat		Text
	Window Up		Ch +		GEQ		Media
	Window Down		Ch -		T-Bass		Dual
	Function		Menu		Timer		AV
	1		1		Sleep		Sleep
	2		2		Clock		Info
	3		3		Mono Tuner		TV/R
	4		4		Band		Subt
	5		5		1 CD Direct		Shift + 1
	6		6		2 CD Direct		Shift + 2





	Original	Recharge
	3 CD Direct	SHIFT + Shift + 3
	4 CD Direct	SHIFT + Shift + 4
	5 CD Direct	SHIFT + Shift + 5

	Original	Recharge

