 





 


 
 












 



 





 



 
 

 

 
 

 
 
 
 

 
 

 

 
 
 
 

 
 
 
 


 
 




| Original | Rechange | Original | Rechange |
|--|---|---|---|
|  Power |  Power |  <</REW |  << |
|  1 |  1 |  Pause/Still |  Pause |
|  2 |  2 |  Stop |  Stop |
|  3 |  3 |  Channel/Tracking |  Ch + |
|  4 |  4 |  Channel/Tracking- |  Ch - |
|  5 |  5 |  Up |  Up |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Left |  Left |
|  9 |  9 |  OK/CLK/CNT |  Ok |
|  0 |  0 |  Clear |  Exit |
|  Tv/VCR |  TV/R |  i/Menu |  Menu |
|  AD-Skip |  Guide |  Speed |  Smart |
|  Rec/OTR |  Rec |  AV |  AV |
|  Eject |  Eject |  Rec End Search |  3D |
|  Play |  Play |  Child Lock |  Media |
|  >>/F.FWD |  >> |  VISS |  Options |



