






















Original		Recharge		Original		Recharge	
	Timer		Shift + Sleep / Timer		7		7
	Sleep		Sleep / Timer		8		8
	Clock		Setup / OPT /		9		9
	Edit/Check		Menu / Home		0		0
	PRGM		TV/Radio /		+10		Guide / EPG / -/-
	Random		Blue / Prime Video / Random		Karaoke Enter		Smart / List
	Repeat / Mono		Green / APP / Repeat		BBE		Info / Angle
	Disc Direct Play 1		Left		Manual		Text / Goto
	Disc Direct Play 2		Up		Dolby Pro-Logic		Sound / Title
	Disc Direct Play 3		Right		Karaoke		Display / Media
	Open/Close		Eject / Surround		T-Bass		Audio / Lang I/II
	1		1		GEQ		Subtitle / EQ
	2		2		Surround		Shift + Eject / Surround
	3		3		CD		Shift + 3
	4		4		<> Direction		Play / Slow
	5		5		Video/AUX		Shift + 4
	6		6		<< / Tuning		<< / Tune-





Original	Recharge	Original	Recharge
 I<<	 I<< / Preset-		
 Tuning Up / >>	 >> / Tune+		
 >>	 >> / Preset+		
 Tuner/Band	 Shift + 6		
 Rec/Rec Mute	 Rec / Rec Mode		
 Stop/Clear	 Stop / Hold		
 Pause/Set	 Pause / Step / Freeze		
 Tape/Deck 1/2	 Shift + 5		
 Power	 Power		
 Volume Down	 Vol-		
 Volume Up	 Vol+		

