




 



 

 





Original		Rechange		Original		Rechange	
	Timer		D.Menu / Top		LW		CH- / Page-
	Timer	+	Shift + Sleep / Timer		9		9
	Set		Menu / Home		10		Guide / EPG / -/--
	Standby / Delete	+	Shift + Power		11		0
	Standby / Delete		Exit / Cancel / Clear		12		Fav / Marker / PC
	Sleep		Sleep / Timer		FM Mode		Red / Netflix / Search
	Power		Power		Direct		Green / APP / Repeat
	FM		Smart / List		Function		Yellow / YouTube / Repeat
	1		1		CD I<<<		I<<< / Preset-
	2		2		CD >>I		>>I / Preset+
	3		3		CD Stop		Stop / Hold
	4		4		CD Pause		Pause / Step / Freeze
	MW		CH+ / Page+		CD Play		Play / Slow
	5		5		DECK <<<		Down
	6		6		DECK Rev. Play		Left
	7		7		DECK Play		Right
	8		8		DECK >>>		Up





Original		Rechange		Original	Rechange
	DECK Stop		OK		
	PHONO Start / Cut		Display / Media		
	DECK Rec		Info / Angle		
	DECK Pause		Back / Return		
	DECK 1/2		AV / Input / RDS		
	Surround		Eject / Surround		
	BBE		Sound / Title		
	Muting		Mute / Dimmer		
	Volume-		Vol-		
	Volume+		Vol+		





Original		Rechange		Original		Rechange	
	Timer		D.Menu / Top		LW		CH- / Page-
	Timer	+	Shift + Sleep / Timer		CD 9		9
	Set		Menu / Home		CD 0		0
	Standby / Delete		Exit / Cancel / Clear		CD +10		Guide / EPG / -/--
	Standby / Delete	+	Shift + Power		CD Program		TV/Radio /
	Sleep		Sleep / Timer		FM Mode		Red / Netflix / Search
	Power		Power		Direct		Green / APP / Repeat
	FM		Smart / List		Function		Yellow / YouTube / Repeat
	CD 1		1		CD I<<		I<< / Preset-
	CD 2		2		CD >>I		>>I / Preset+
	CD 3		3		CD Stop		Stop / Hold
	CD 4		4		CD Pause		Pause / Step / Freeze
	MW		CH+ / Page+		CD Play		Play / Slow
	CD 5		5		DECK <<		Down
	CD 6		6		DECK Rev. Play		Left
	CD 7		7		DECK Play		Right
	CD 8		8		DECK >>		Up





Original		Rechange		Original	Rechange
	DECK Stop		OK		
	PHONO Start / Cut		Display / Media		
	DECK Rec		Info / Angle		
	DECK Pause		Back / Return		
	DECK 1/2		AV / Input / RDS		
	Surround		Eject / Surround		
	BBE		Sound / Title		
	Muting		Mute / Dimmer		
	Volume-		Vol-		
	Volume+		Vol+		





Original		Rechange		Original		Rechange	
	Timer		D.Menu / Top		LW		CH- / Page-
	Timer	+	Shift + Sleep / Timer		GEQ Down		Down
	Set		Menu / Home		GEQ Up		Up
	Standby / Delete		Exit / Cancel / Clear		GEQ Off/On		OK
	Standby / Delete	+	Shift + Power		GEQ PRGM		AV / Input / RDS
	Sleep		Sleep / Timer		FM Mode		Red / Netflix / Search
	Power		Power		Direct		Green / APP / Repeat
	FM		Smart / List		Function		Yellow / YouTube / Repeat
	GEQ 40Hz		1		CD I<<<		I<<< / Preset-
	GEQ 125Hz		2		CD >>I		>>I / Preset+
	GEQ 330Hz		3		CD Stop		Stop / Hold
	GEQ 1KHz		4		CD Pause		Pause / Step / Freeze
	MW		CH+ / Page+		CD Play		Play / Slow
	GEQ 2.5KHz		5		PHONO Start / Cut		Display / Media
	GEQ 6.3KHz		6		Surround		Eject / Surround
	GEQ15KHz		7		BBE		Sound / Title
	GEQ		TV/Radio /		Muting		Mute / Dimmer



PRGM/Manual                      Program



Original	Rechange	Original	Rechange
VOLUME -	VOL -		
VOLUME +	VOL +		

