

 





 









 



 







 










 
























	Original	Rechange
	Standby	 Power
	Mute	 Mute / Dimmer
	Play / Size	 Play / Slow
	Pause /	 Pause / Step / Freeze
	Stop / Hold	 Stop / Hold
	<<	 << / Tune-
	>>	 >> / Tune+
	<<	 << / Preset-
	>>	 >> / Preset+
	S.Mode	 Sound / Title
	Audio	 Audio / Lang I/II
	Subtitle	 Subtitle / EQ
	Pic. Mode	 Picture / Format
	Sleep	 Sleep / Timer
	TV / Radio	 TV/Radio /
	Index	 D.Menu / Top
	Text	 Text / Goto

	Original	Rechange
	Source	 AV / Input / RDS
	Menu	 Menu / Home
	Up	 Up
	Left	 Left
	OK	 OK
	Right	 Right
	Exit	 Exit / Cancel / Clear
	Down	 Down
	Recall	 Back / Return
	Vol+	 Vol+
	CH. List	 Smart / List
	CH+	 CH+ / Page+
	Vol-	 Vol-
	Display	 Display / Media
	CH-	 CH- / Page-
	1	 1
	2	 2





Original	Recharge
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
FAV	PC FAV MARKER Fav / Marker / PC
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
Aspect	SHIFT + FORMAT PICTURE Shift + Picture / Format
Home	SHIFT + HOME MENU Shift + Menu /
Reveal	SHIFT + RETURN BACK Shift + Back / Return
Mouse	SHIFT + LIST SMART Shift + Smart / List

Original	Recharge
IE	SHIFT + MEDIA DISPLAY Shift + Display / Media

