

















 
 





Original	Rechange
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 SHIFT +  Shift + Guide
 Recall	 BACK Back
 Mute	 MUTE Mute
 P.Mode	 PICTURE FORMAT Format
 S.Mode	 SHIFT +  Shift + Dual

Original	Rechange
 Sleep	 Sleep
 Vol +	 Vol +
 Vol -	 Vol -
 Audio DVD /	 Dual
 USB / Card	 Media
 Aspect	 3D
 Info	 Info
 Source	 AV
 Menu / Exit	 Menu
 Rec	 Rec
 Subtitle	 Subt
 DVD Setup	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Original		Rechange		Original		Rechange	
	Red / Program		Red		Teletext		Text
	Green / Goto		Green		Tv/Radio		TV/R
	Yellow / Angle		Yellow		Cancel		Exit
	Blue / Slow		Blue		Still		Options
	Canales / Repeat		List				
	FAV / AB		Pre Ch				
	FAV +		Ch +				
	FAV -		Ch -				
	EPG / DVD		Guide				
	Play		Play				
	Pause / Mix		Pause				
	<< / Index		<<				
	>> / Size		>>				
	Stop / Clock		Stop				
	I<< / Hold		I<<				
	>>I / Subpage		>>I				
	Reveal		D. Menu				

