

















 
 






 





 
Original	Recharge
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 SHIFT +  Shift + Guide
 Recall	 RETURN BACK Back
 Mute	 MUTE Mute
 P.Mode	 PICTURE FORMAT Format
 S.Mode	 SHIFT +  Shift + Dual

Original	Recharge
 Sleep	 PROG SLEEP Sleep
 Vol +	 + VOL Vol +
 Vol -	 VOL - Vol -
 Audio DVD /	 SOUND DUAL Dual
 USB / Card	 APP MEDIA Media
 Aspect	 ECO 3D 3D
 Info	 DISPLAY INFO Info
 Source	 TIMER AV AV
 Menu / Exit	 TOP MENU MENU Menu
 Rec	 REC MODE Rec
 Subtitle	 AD SUBT Subt
 DVD Setup	 HOME SMART Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK Ok





Original	Recharge
 Red / Program	 Red
 Green / Goto	 Green
 Yellow / Angle	 Yellow
 Blue / Slow	 Blue
 Canales / Repeat	 List
 FAV / AB	 Pre Ch
 FAV +	 Ch +
 FAV -	 Ch -
 EPG / DVD	 Guide
 Play	 Play
 Pause / Mix	 Pause
 << / Index	 <<
 >> / Size	 >>
 Stop / Clock	 Stop
 I<< / Hold	 I<<
 >>I / Subpage	 >>I
 Reveal	 D. Menu

Original	Recharge
 Teletext	 Text
 Tv/Radio	 TV/R
 Cancel	 Exit
 Still	 Options

