




 

 

 



 




 
 










Original	Recharge
 Power	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-- / +10	 SHIFT +  Shift + Guide
 Recall	 RETURN BACK Back
 Mute	 MUTE Mute
 P.Mode	 PICTURE FORMAT Format
 S.Mode	 SHIFT +  Shift + Dual

Original	Recharge
 Sleep	 PROG SLEEP Sleep
 Vol +	 + VOL Vol +
 Vol -	 VOL - Vol -
 Audio DVD /	 SOUND DUAL Dual
 USB / Card	 APP MEDIA Media
 Aspect	 ECO 3D 3D
 Info	 DISPLAY INFO Info
 Source	 TIMER AV AV
 Menu / Exit	 TOP MENU MENU Menu
 Rec	 REC MODE Rec
 Subtitle	 AD SUBT Subt
 DVD Setup	 HOME SMART Smart
 Up	 Up Up
 Down	 Down Down
 Right	 Right Right
 Left	 Left Left
 Enter	 OK Ok





Original		Rechange		Original		Rechange	
	Red / Program		Red		Teletext		Text
	Green / Goto		Green		Tv/Radio		TV/R
	Yellow / Angle		Yellow		Cancel		Exit
	Blue / Slow		Blue		Still		Options
	Canales / Repeat		List				
	FAV / AB		Pre Ch				
	FAV +		Ch +				
	FAV -		Ch -				
	EPG / DVD		Guide				
	Play		Play				
	Pause / Mix		Pause				
	<< / Index		<<				
	>> / Size		>>				
	Stop / Clock		Stop				
	I<< / Hold		I<<				
	>>I / Subpage		>>I				
	Reveal		D. Menu				

