
 





 

 

 

 


 




 









 

 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Rechange
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original	Rechange
EXIT	Exit / Cancel / Clear
SUBTITLE	Subtitle / EQ
INDEX	Info / Angle
SIZE	Zoom / Size
REVEAL	D.Menu / Top
MIX	Setup / OPT /
HOLD	Play / Slow
HOLD	Pause / Step / Freeze
CANCEL	I<< / Preset-
SUBPAGE	>>I / Preset+
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC
FAV	Stop / Hold
FAV-	<< / Tune-
FAV+	>> / Tune+
MEDIA	Shift + Display / Media
REC	Rec / Rec Mode

Original	Rechange
TIMESHIFT	Smart / List
TV/RADIO	TV/Radio /

