


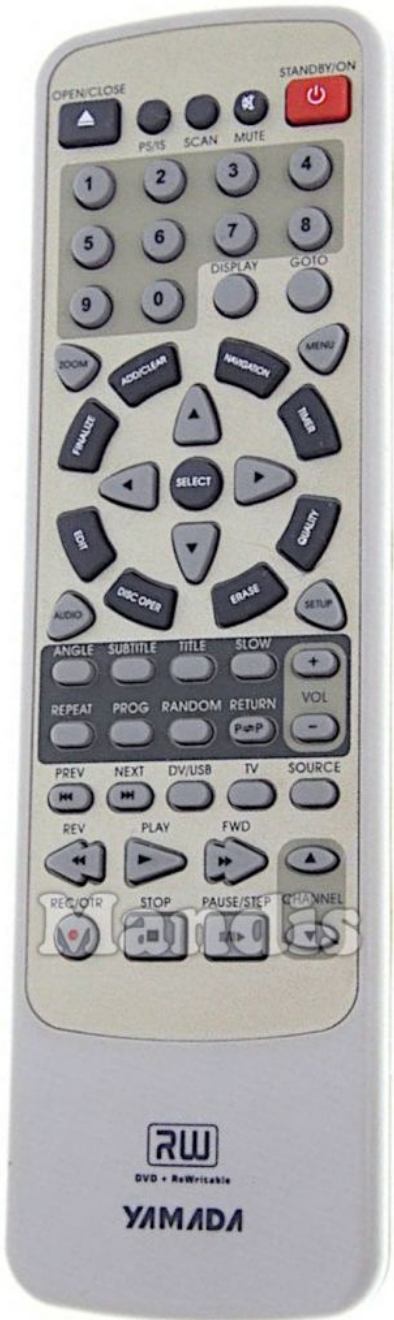

Original	Rechange
 Standby / On	 Power
 Open / Close	 Eject
 PS/IS	 Red
 Scan	 Green
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Goto	 Guide

Original	Rechange
 Zoom	 Shift + Eject
 Add / Clear	 Exit
 Navigation	 List
 Menu	 Menu
 Finalize	 Yellow
 Timer	 Shift + AV
 Up	 Up
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Edit	 Blue
 Quality	 3D
 Audio	 Dual
 Disc Oper	 Smart
 Erase	 Shift + Back
 Angle	 Format





Original	Rechange
Title	D. Menu
Setup	Options
Subtitle	Subt
Slow	Shift + Play
Vol+	Vol +
Vol-	Vol -
Repeat	Text
Prog	Sleep
Random	Shift + TV/R
Return P->P	Back
DV/USB	Media
I<< Prev	I<<
Next >>I	>>I
TV	TV/R
Source	AV
<< Rev	<<
Play	Play

Original	Rechange
Fwd >>	>>
Channel+	Ch +
Channel-	Ch -
Rec / Otr	Rec
Stop	Stop
Pause / Step	Pause

