





 



 













 
 












Original		Rechange		Original		Rechange	
	[]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[> <]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Rec / Rec Mode		Down		Down
	Red / Rec		Red / Netflix / Search		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		>> / Tune+		2		2
	White / >>		Fav / Marker / PC		3		3
	[]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5


 














 
 




 













 





 



 



 

 





 





 







	Original	Rechange	Original	Rechange
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[<>]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[]	 Setup / OPT /		





Original	Recharge	Original	Recharge
 DVD	 Shift + 2	 Vol+	 Vol+
 [1 2]	 Red / Netflix / Search	 Mute	 Mute / Dimmer
 [< >]	 Green / APP / Repeat	 P+	 CH+ / Page+
 [> <]	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 <<	 << / Tune-	 P-	 CH- / Page-
 Stop	 Stop / Hold	 1	 1
 Play	 Play / Slow	 2	 2
 >>	 >> / Tune+	 3	 3
 []	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5
 [≡]	 Text / Goto	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 [> <]	 Pause / Step / Freeze	 [i+]	 Info / Angle
 Down	 Down	 0	 0
 [...]	 Subtitle / EQ	 P<P / -/-	 Guide / EPG / -/-







 



 













 
 












Original		Recharge		Original		Recharge	
	[]→		Exit / Cancel / Clear		[≡]		Text / Goto
	Power		Power		Left		Left
	[1 2]		Shift + Red / Netflix /		OK		OK
	[← →]		Shift + Green / APP /		Right		Right
	[> <]		Shift + Yellow / YouTube /		[> <]		Pause / Step / Freeze
	Red / Rec		Red / Netflix / Search		Down		Down
	Red / Rec		Rec / Rec Mode		[...]		Subtitle / EQ
	Green / <<		Green / APP / Repeat		Vol+		Vol+
	Green / <<		<< / Tune-		Mute		Mute / Dimmer
	Yellow / Stop		Stop / Hold		P+		CH+ / Page+
	Yellow / Stop		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue / Play		Blue / Prime Video / Random		P-		CH- / Page-
	Blue / Play		Play / Slow		1		1
	White / >>		Fav / Marker / PC		2		2
	White / >>		>> / Tune+		3		3
	[]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5



 






 



 


 







 













 


 






















 







	Original	Recharge	Original	Recharge
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↕] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[<>]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[■]	 Setup / OPT /		





Original		Rechange		Original		Rechange	
	[]→		Exit / Cancel / Clear		Down		Down
	Power		Power		[...]		Subtitle / EQ
	[1 2]		Red / Netflix / Search		Vol+		Vol+
	[← →]		Green / APP / Repeat		Mute		Mute / Dimmer
	[> <]		Yellow / YouTube / Repeat		P+		CH+ / Page+
	Rec		Rec / Rec Mode		Vol-		Vol-
	<<		<< / Tune-		P-		CH- / Page-
	Stop		Stop / Hold		1		1
	Play		Play / Slow		2		2
	>>		>> / Tune+		3		3
	[]		Shift + Guide / EPG / -/-		4		4
	Up		Up		5		5
	[≡]		Text / Goto		6		6
	Left		Left		7		7
	OK		OK		8		8
	Right		Right		9		9
	[> <]		Pause / Step / Freeze		[i+]		Info / Angle





Original		Recharge		Original	Recharge
	0		0		
	P<P / -/--		Guide / EPG / -/--		
	[⊙]		Sleep / Timer		
	[?]		AV / Input / RDS		
	[↕] / Zoom		Zoom / Size		
	Smart Sound		Sound / Title		
	[<>]		D.Menu / Top		
	Smart Picture		Picture / Format		
	Instant Rec		Shift + Rec / Rec Mode		
	I-II		Audio / Lang I/II		
	DNR		Back / Return		
	[]		Setup / OPT /		

