


 



 



 

 



 



 



 

 



 

 



 



 



 



 
 
 

 
 



 
 



 






 












Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	TV / STB		TV/R		OK		Ok
	Mute		Mute		Right		Right
	1		1		Down		Down
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Menu		Menu
	5		5		Exit		Exit
	6		6		TV Out		Media
	7		7		Guia TV		Guide
	8		8		Video Clube		Smart
	9		9		Stop		Stop
	0		0		Play		Play
	Back / AV		Back		Pause		Pause
	V+		Vol +		Rec		Rec
	V-		Vol -		I<		I<<
	Up		Up		<<		<<





	Original	Rechange		Original	Rechange
	>>		>>		
	>		>>		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	Record List		List		

	Original	Rechange		Original	Rechange

