



Original	Rechange	Original	Rechange
 Standby	 Power	 Right	 Right
 Info	 Info / Angle	 Vol+	 Vol+
 Subtitle	 Subtitle / EQ	 Record	 Rec / Rec Mode
 Mute	 Mute / Dimmer	 Down	 Down
 I<<	 I<< / Preset-	 CH-	 CH- / Page-
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 Pause	 Pause / Step / Freeze	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9





Original		Recharge		Original		Recharge	
	0		0				
	Media		Display / Media				
	USB		Shift + 8				
	Tv/Radio		TV/Radio /				
	Audio		Audio / Lang I/II				
	TTX		Text / Goto				
	Timer		Sleep / Timer				
	FAV		Fav / Marker / PC				
	Res		D.Menu / Top				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

